

# JMC Worldwide Inc.

For Inquires Call: 856-697-4400 or email [jmc@jmcserv.com](mailto:jmc@jmcserv.com)

## HP 84000 Spares and Parts

Part Number	Description
E1401B	
E1482B	
E1450A	
E1451A	
E1452A	
E1458A	
E1413C	
E1416A	
E1418A	
E1428A	
E1430A	
E1445A	
E1472A	
E1473A	
E6404A	
E6432A	
VX462B	
84000-60002	
84000-60177	
84000-60282(E5448B)	
84000-60403(E5430B)	
84000-60404(E5432B)	
84000-60405(E5435B)	
84000-60518	
84000-60519	
84001-60073	
84001-60243	
84001-60297	
84001-80066	LAMBDA
84001-80067	LAMBDA
84000-60335	SYSTEM INTERFACE
84000-60412	I/F FILTER
84001-60292	TWO TONE COMBINER
6612C	AGILENT DC POWER SUPPLY
6631B	AGILENT MOBILE COMM SOURCE
E4432B	AGILENT ESG-D SERIES SIGNAL GENERATOR OPTIONS: 1EM, UN5, UN8, UND
<b>CAL BOARDS</b>	<b>DESCRIPTION</b>
84000-60014	POWER/NF CAL
E5433-60002	CAL VERIFICATION
E5433-60003	1st THRU CAL
E5433-60004	2nd THRU CAL
E5433-60005	3rd THRU CAL
E5433-60006	4th THRU CAL
84001-60211	LOAD BOARD
COMPUTER	
HP VISUALIZE 8180L	
MONITOR	